

Pressurized Water Protective Case „D“


for underwater measurements together with the
dose rate meter „X5C plus“

The pressurized water protective case „D“ can be used together with the
GRAETZ gamma probes 18509 CE, 18529 CE and 18550 CE.

Combined with the dose rate meter „X5C plus“ it is possible to perform
underwater measurements up to a submersion depth of 30 m.

The picture below shows the pressurized water protective case with
10 m probe cable and a steel rope for handling the container and for
cable relief.

The measuring range over all probes is: 10 μ Sv/h up to 10 Sv/h.

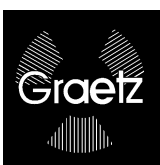

GRAETZ Strahlungsmeßtechnik GmbH
Westiger Straße 172 · 58762 Altena / Germany
P.O. Box 81 00 · 58754 Altena / Germany
Phone +49 2352 7007-0 · Fax +49 2352 7007-10
E-Mail: info@graetz.com
Website: www.graetz.com

10/2012
subject to technical
change